


- 1 Remove the screws of the TV case and open it up.



- 2 After removing the TV case, remove the screws of the panel so you can lift the panel up.

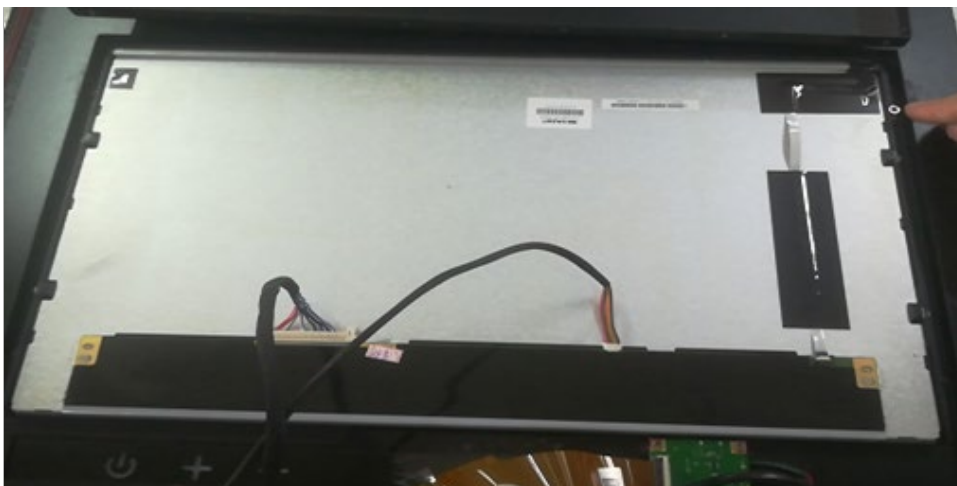

- 3 When you see the touch film board, carefully remove the film and then plug it back in.

