



- 1 Extract the .zip file to your desktop.

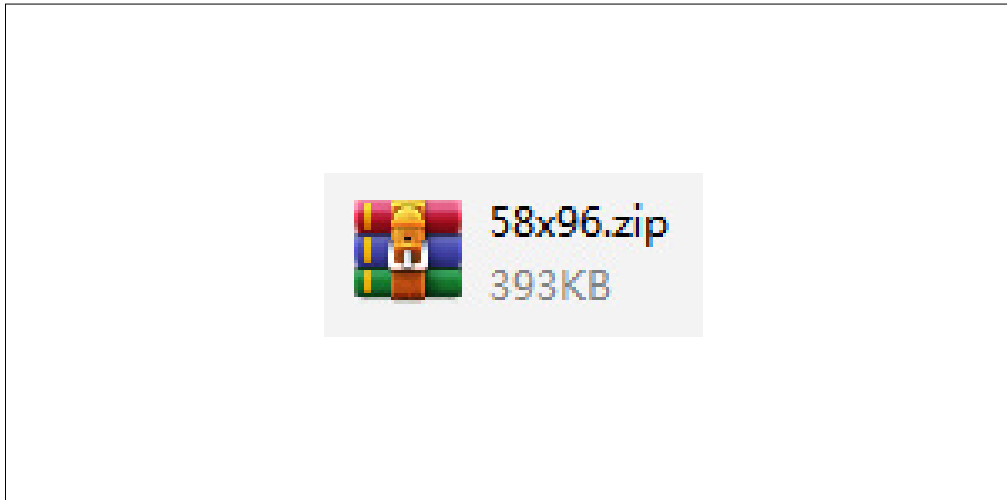


- 2 Plug the TV Touch Film USB into your computer.

- 3 Once the USB Folder opens, find "1" and double click it.

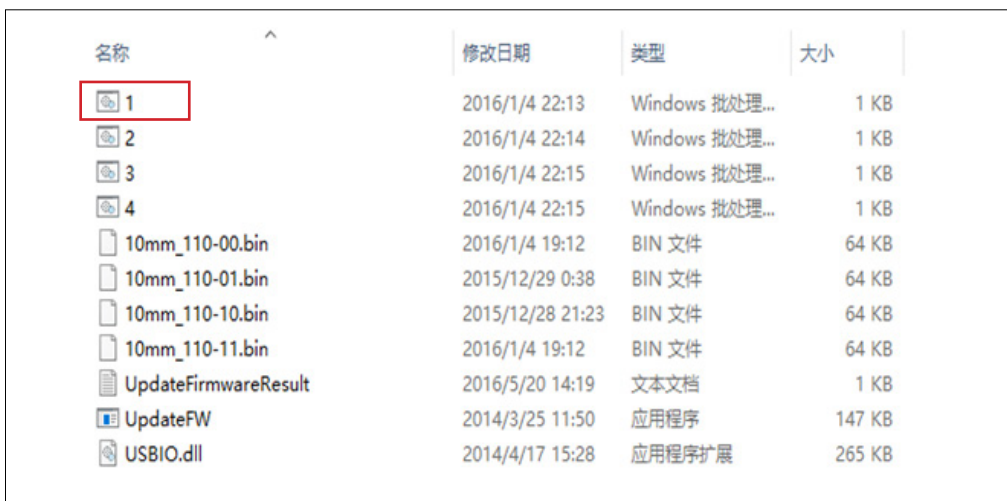

- 4 Following the process, you will see this window. The window will automatically close after the software is written.

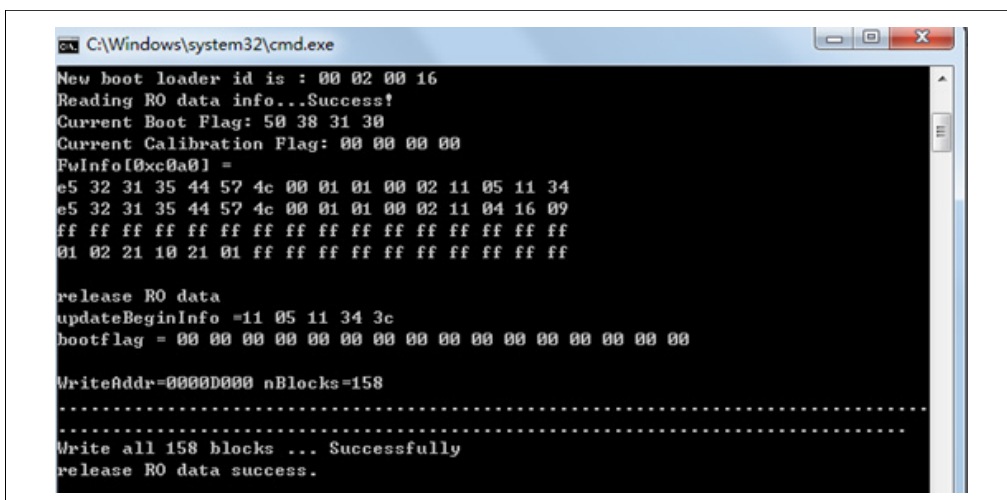

5 Double click "2" if the direction is not correct.

名称	修改日期	类型	大小
1	2016/1/4 22:13	Windows 批处理...	1 KB
2	2016/1/4 22:14	Windows 批处理...	1 KB
3	2016/1/4 22:15	Windows 批处理...	1 KB
4	2016/1/4 22:15	Windows 批处理...	1 KB
10mm_110-00.bin	2016/1/4 19:12	BIN 文件	64 KB
10mm_110-01.bin	2015/12/29 0:38	BIN 文件	64 KB
10mm_110-10.bin	2015/12/28 21:23	BIN 文件	64 KB
10mm_110-11.bin	2016/1/4 19:12	BIN 文件	64 KB
UpdateFirmwareResult	2016/5/20 14:19	文本文档	1 KB
UpdateFW	2014/3/25 11:50	应用程序	147 KB
USBIO.dll	2014/4/17 15:28	应用程序扩展	265 KB

6 Turn around to "3" and "4" as last step.

名称	修改日期	类型	大小
1	2016/1/4 22:13	Windows 批处理...	1 KB
2	2016/1/4 22:14	Windows 批处理...	1 KB
3	2016/1/4 22:15	Windows 批处理...	1 KB
4	2016/1/4 22:15	Windows 批处理...	1 KB
10mm_110-00.bin	2016/1/4 19:12	BIN 文件	64 KB
10mm_110-01.bin	2015/12/29 0:38	BIN 文件	64 KB
10mm_110-10.bin	2015/12/28 21:23	BIN 文件	64 KB
10mm_110-11.bin	2016/1/4 19:12	BIN 文件	64 KB
UpdateFirmwareResult	2016/5/20 14:19	文本文档	1 KB
UpdateFW	2014/3/25 11:50	应用程序	147 KB
USBIO.dll	2014/4/17 15:28	应用程序扩展	265 KB